

1/7

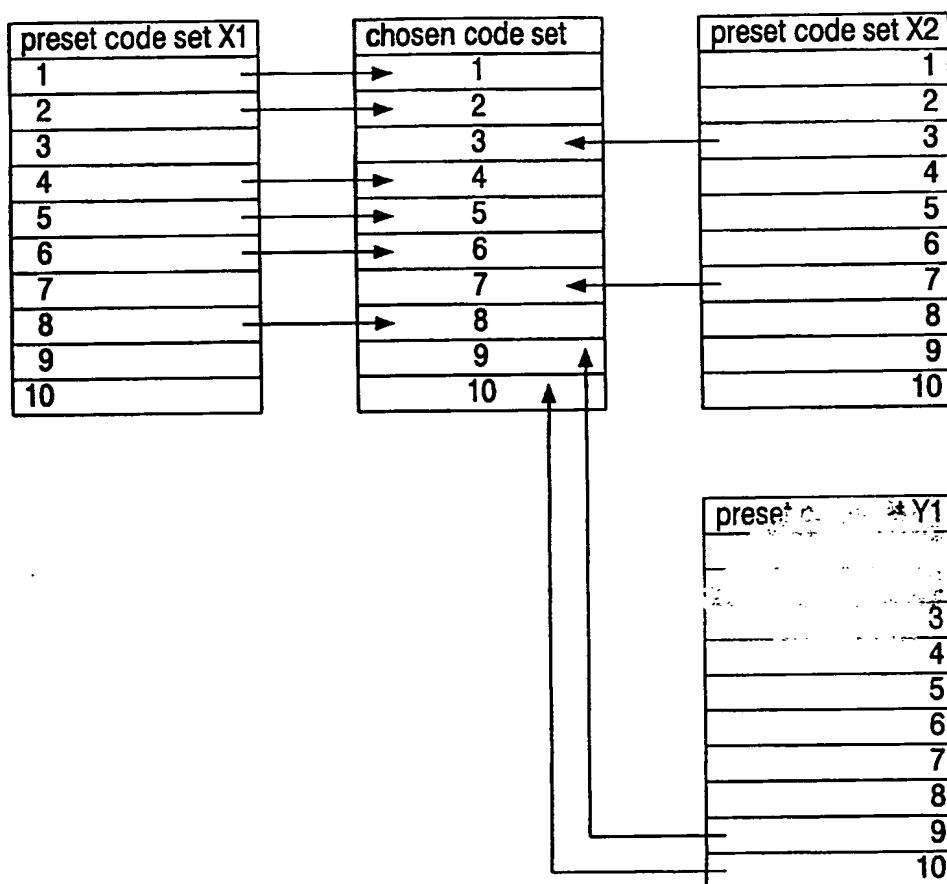 


FIG. 1

2/7

 
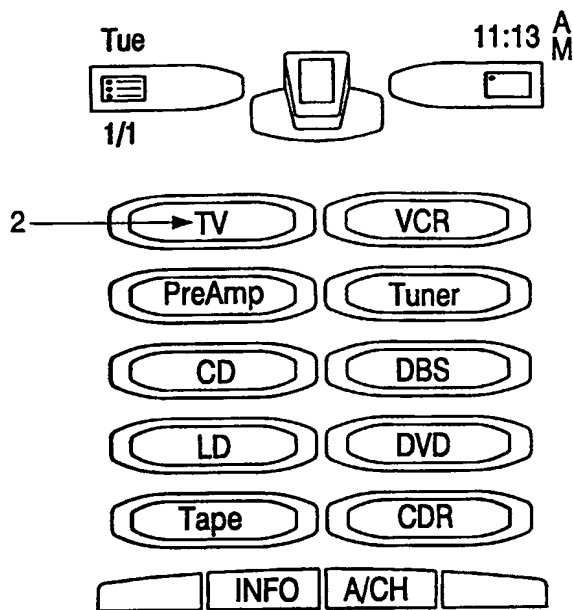 


FIG. 2

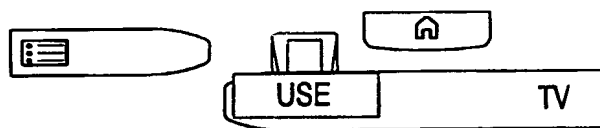

Philips RC codes are
installed in this device
Do you want to change it?

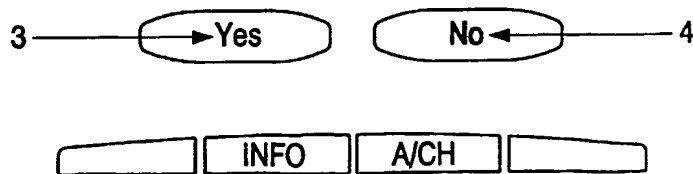 


FIG. 3

3/7



In the next screen tap
your brand in the list
If your brand is not
listed, press Search

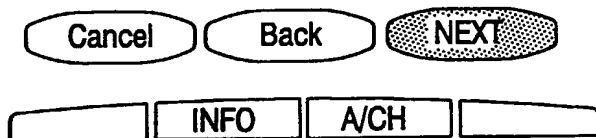 


FIG. 4

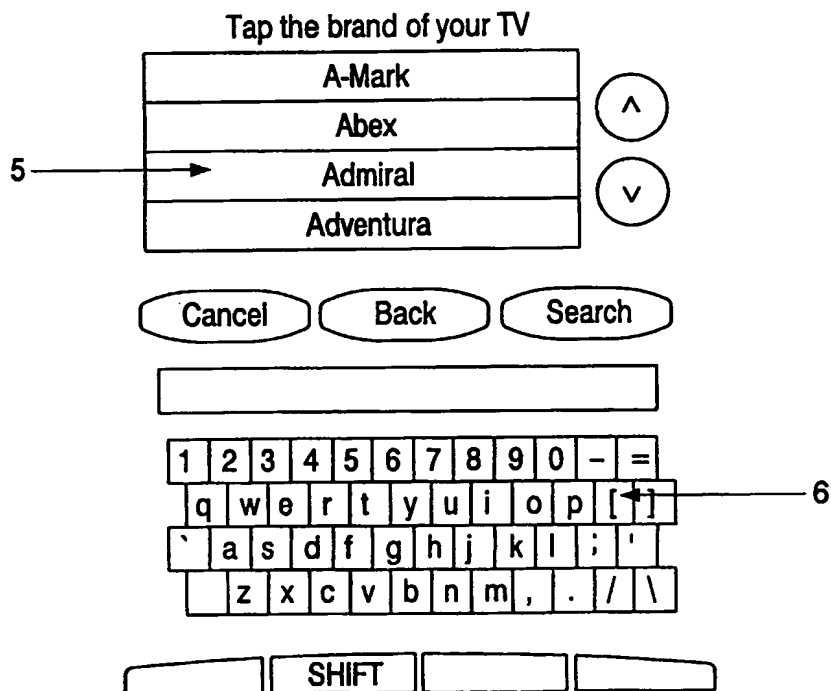 


FIG. 5

4/7

 
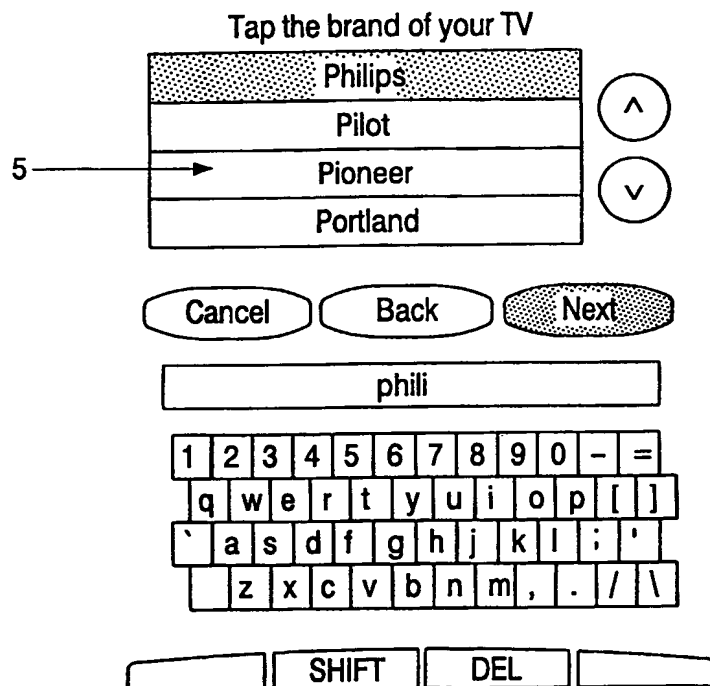 


FIG. 6

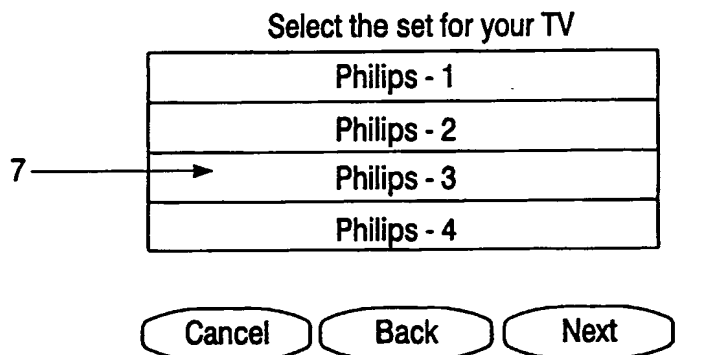

This brand has 4 RC code sets
Tap one or press Search to
step through all possibilities



FIG. 7

5/7

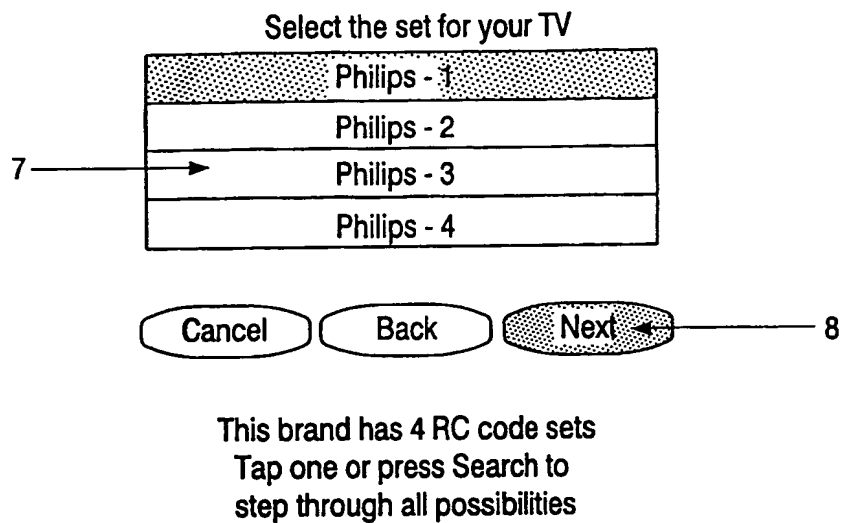 


FIG. 8

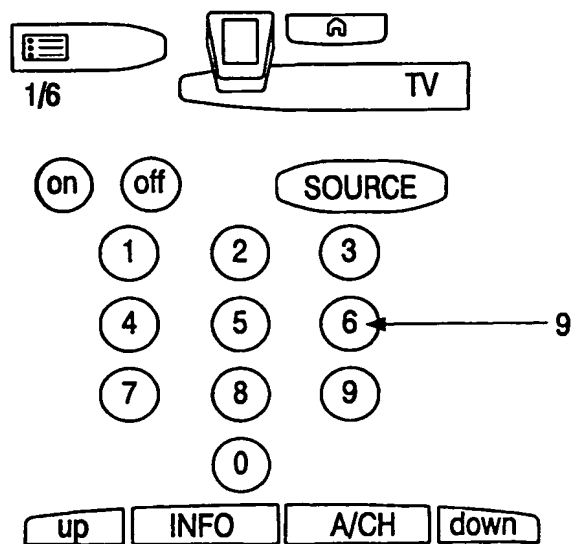 


FIG. 9

6/7



If your TV functions
properly, press Next,
otherwise press Back

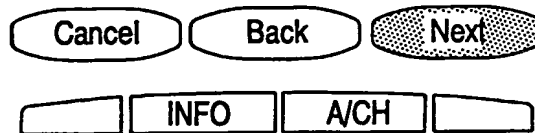 


FIG. 10

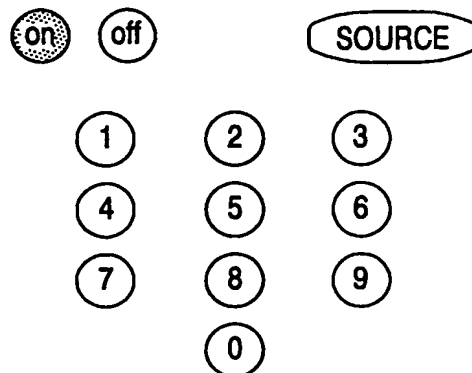 


FIG. 11

7/7



If all buttons are
installed, press Next
Else press Back

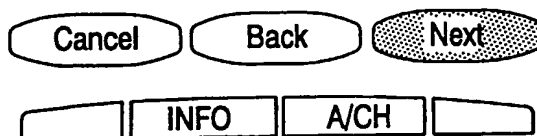 


FIG. 12

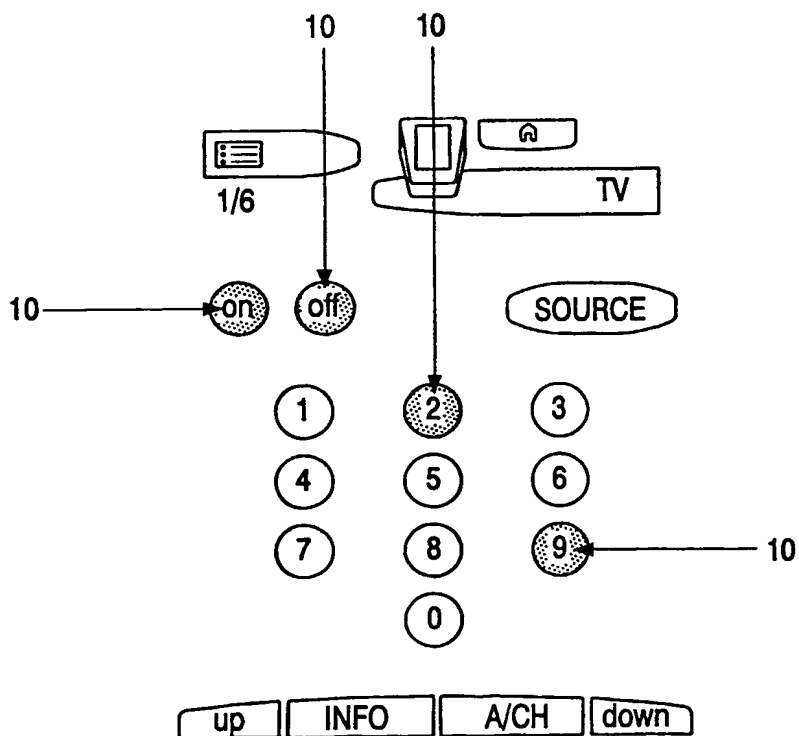 


FIG. 13